 


MODEL NO.: BLT-999A-2

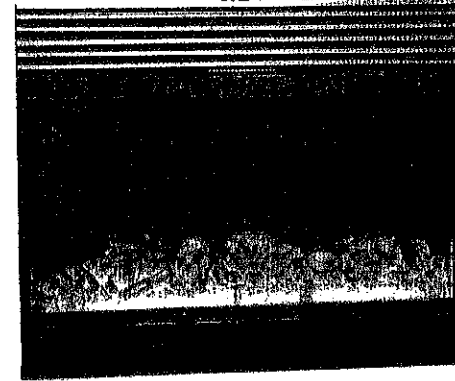

---


## INSTRUCTIONS FOR USE

 ---

Natural flame effect  
Constant temperature  
Ventilator control switch  
Energy-saving  
Easy to use  
Elegant design  
Plug connected  
110~120V~ 60Hz 1400W


## IMPORTANT INSTRUCTIONS

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least three feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bath or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect to properly grounded outlets only. (This item may be omitted if the heater is not provided with a grounding type attachment plug.)
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has not and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
16. This heater may include an audible (a visual) alarm to warn that parts of the heater are getting excessively hot, if the alarm sounds (flashes), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (FLASHING)**
17. **SAVE THESE INSTRUCTIONS**

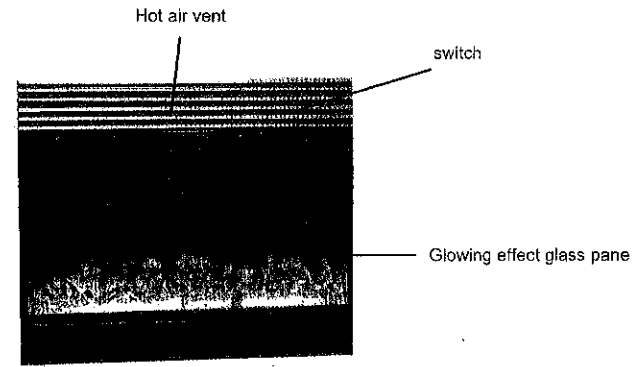

## Special characteristics of this heater

 - a. The smouldering glow of the flames can hardly be distinguished from that of a real fireplace. This heater is ideal for use outside the cold season, when the central heating is switched off.
- b. Produces the effect of a hot current of air.
- c. Energy-saving, automatic and constant temperature control.

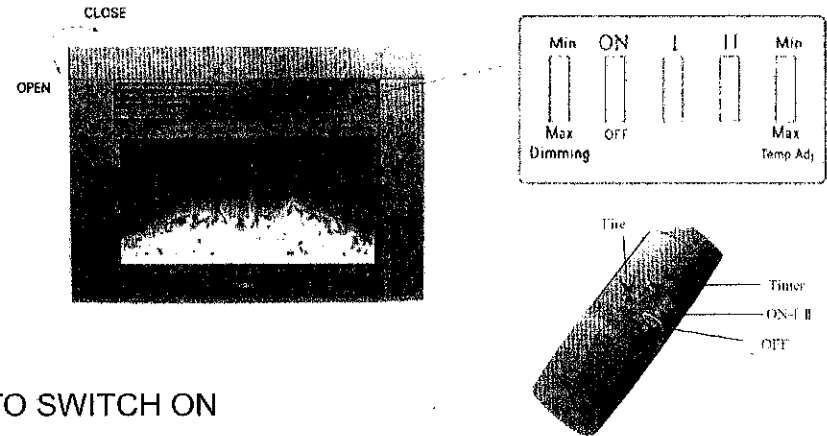

## TO SWITCH ON MANUAL OPERATION

The control switches are behind the front panel of the machine.

1. Plug in the appliance into the socket
2. For the flame effect, turn the right switch "ON"
3. For a half level of heating, turn on switch "I"
4. For the full heating, turn on switch "I" & "II"
5. For the temperature control, turn around the left switch "Temp Adj."
6. For the dimming, turn around the switch "Dimming"

## REMOTE OPERATION

plug in the outlet, the machine will be in ready.

1. FIRE: once touch, the fire indicator lit up, the charcoal begin burning, touch again, the flame begin going out.
2. POWER-LOW/HI: one touch, the half-hot indicator lit up, the hot wind coming out from the wind outlet. touch again, the complete heat begin coming out, touch third times, no heat wind
3. TIMER: make sure the POWER-LOW/HI is touched first, before touch this button! You can realize the hours timing, automatically closed after the timed hours, and the period of timing decided by the added together of figures whose indicator is lit up. If any indicator is not lit up, means that the machine is no timing, if you want to close the machine, you have to touch the off button .
4. OFF: once touch, the machine stop working, and again in ready.

## Unpacking and installing the appliance

Open the packaging carefully and remove the appliance. Keep the original packaging for future transport.

Keep the front of the appliance through which the heat is radiated at least one meter away from furniture, curtains and other flammable objects at all times.

Ensure there is a grounded socket nearby(back of the appliance).

Never use an extension lead . the mains cable must remain at the back of the appliance and must not be in contact with any hot elements.

## Safety instructions

Only use the appliance in accordance with the instructions in this manual. It cannot be used for any other purpose. Any damage due to inappropriate operation, wrongful use or not observing the safety instructions is not covered by the guarantee.

Never operate the appliance when the appliance itself or the mains cable show any signs of damage.

Be responsible when handling the packing material.

Warning: plastic wrapping may be lethal to children.

Do not place the appliance below a socket.

Never operate the heater on a program switch, timer switch or any other appliance for automatic operation.

The heater is only suitable for indoor use.

Never use the appliance near the bath, shower or a swimming pool.

Never place flammable objects or clothing on top of the heater.

Do not cover the heater.

Never leave children unattended near the appliance.

In case of malfunction, disconnect the plug immediately.

When not in use for a considerable amount of time, unplug the appliance.

Repairs such as replacing a bulb should only be performed by an approved electrotechnician.

Components should only be serviced by an approved electrotechnician.

## Cleaning the exterior of the appliance

Before cleaning the appliance, disconnect it from the socket and leave to cool off. You can clean the exterior of the heater with a soft, damp cloth. Do not use cleaning or polishing products.

### Manufacture's guarantee

There is an ex fabrica guarantee of one year. During this period, faulty components will be repaired or replaced free of charge, if the fault is due to a manufacturing defect.

In this case, consult the retailer where you have purchased the appliance.

(Below some more instructions for the approved electrotechnician who carries out maintenance or repairs to your heater):

## Instructions for the approved electrotechnician

The appliance comes with the following light bulbs:

 
Three 40W light bulbs(max. 40W)

## Changing the bulbs

Warning: unplug first! The plug must be removed from the socket-outlet before opening

Loosen both screws at the front of the flame effect element(1)

Pull the element towards you

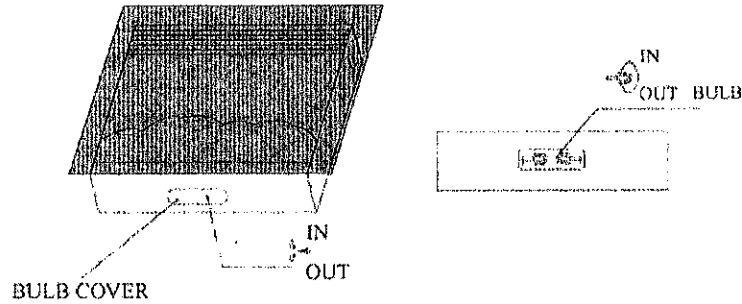

## CAUTION: sharp edges!

You can now replace faulty bulbs by identical ones with the same wattage.

After installation, the power plug should be accessible.

If the power cord is damaged. It must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

The heater must be located immediately below a socket.

The appliance is not intended for use by young children or infirm persons. Young children should be supervised to ensure that they do not play with the appliance.

Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

In order to avoid overheating, do not cover the heater.

## USER INSTRUCTIONS

Instructions and cautionary statements for cleaning, user-maintenance, operations recommended by the manufacturer, such as lubrication or nonlubrication, and a warning to the user that any other serving should be performed by an authorized service representative.

 
Any heater employing a manually reset control shall be provided with instructions to the user regarding its operation.

Specific instructions for the proper method of cord storage, total heater storage, and the like when the heater is not in use.

## Grounding instructions

(in the case of a heater rated for a nominal 120volts.) this heater is for use on 120volts. The cord has a plug as shown at A in Figure 61.1. an adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

(in the case of a heater rated for a normal 240 or 208 volts.) this heater is for use on 240( or 208) volts. The cord has a plug as shown in D in Figure 61.1, no adapter is available for this blade configuration, and none should be used. The type outlet is a 240 (or 208) volt grounding outlet. When properly installed, it provides a ground connection through the cord to the heater to protect the operator from electric shock.

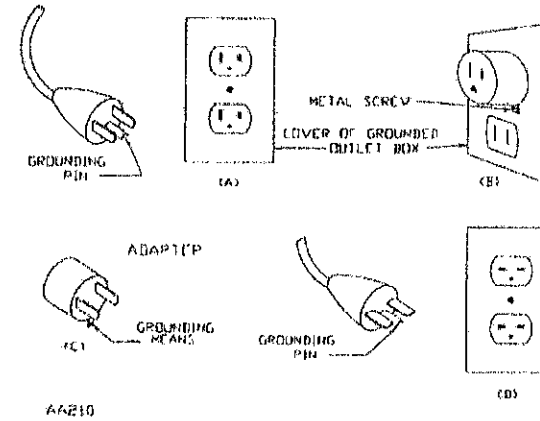

## Technical data:

Mains voltage: 110~120V

Mains frequency: 60Hz

Nominal charge: max. 1400W

## ELECTRICAL DIAGRAM

