

Controls

Use two "AA" size batteries. The batteries may last approximately one year depending on how much the remote control is used. For best performance, it is recommended that batteries should be replaced on a yearly basis, or when the remote operation becomes erratic. Do not mix old and new batteries or different types.


BATTERY PRECAUTIONS

These precautions should be followed when using batteries in this device:

- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
- Please use caution when inserting batteries to avoid battery damage. If the spring terminal in the remote control remains in contact with a side of a damaged battery it can cause a short circuit. Never use damaged batteries as they can become very hot and are dangerous.
- Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority.

TV Controls.

The control buttons on the TV and their functions.

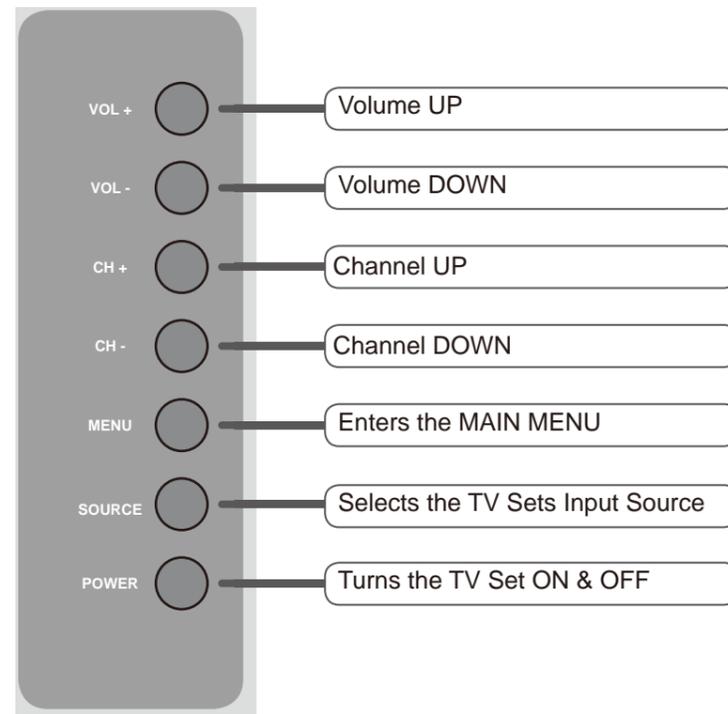

*Please note that the configuration of the controls may vary from model to model.

Controls

Unimote Remote Control.

The Furrion Unismart™ remote control's functions.



POWER Turns the TV On & Off **TV** Switches to TV mode

1 - 0/TA **Numerical Buttons** Enters numbers and selects channels

P.TY Toggles between single & double digit input

↔ Toggles between the current and previous channel

P.MODE **Picture Mode** Cycles through picture modes

S.MODE **Sound Mode** Cycles through sound modes

ASPECT **Aspect Ratio** Cycles through available display aspect ratios

DISPLAY **Display** Toggles on screen on the selected source On & Off

INFO OSD **INFO/OSD** Displays information on the selected TV channel

AUTO **Auto** Automatically adjusts the picture in PC mode

MENU **Menu** Enters the main menu

F.LIST **F.List** Displays the favorites list

C.LIST **C.List** Displays the channel list

FAV **FAV** Adds items to the favorites list

EPG **EPG** Displays the program guide

SOURCE **Source** Cycles through input sources

EXIT **Exit** Exits the current menu

Navigation Buttons **OK** Confirms selections

Mute Toggles audio On or Off

VOL **Volume** Increases/ decreases volume

CH **Channel** Channel Up/Down

M.TS AUDIO **M.TS/ AUDIO** Cycles through MTS sound modes

CLOCK SLEEP **SLEEP** Sets the sleep timer

CC **CC Closed Caption** Toggles Closed Captions On & Off

FIREPLACE TV **TV** Selects Furrion Fireplace remote control functions

Please refer to your Furrion Fireplace manual for more information

Controls

The Furrion Unismart™ remote control allows control of other Furrion systems



Button Functions when the remote control is in Stereo Mode

- POWER** Turns the Entertainment System On & Off
- STEREO** Switches to Stereo mode
- Numerical Buttons** Enters numbers and selects channels
- INFO/OSD** Displays DVD playback status
- Navigation Buttons**
OK Confirms selections
- Volume** Increases/ decreases volume
- Play/ Pause** Starts, Pauses or restarts Playback
- Previous/ Next:** Press during playback to select the previous or next track/ chapter. Press and hold to fastforward or rewind. Automatic or Manual tuning in radio mode
- Mute** Toggles audio On or Off
- Stop** Stops playback
- Eject** Ejects DVD/ CD
- Step** Press to forward frame by frame during DVD/ VCD playback. Dial or Accept a call (when the system is connected to a cell phone)
- APS** Press to scan radio stations: A brief press searches through each stored station. Press & hold to scan and store the 6 strongest stations. End or Reject a call (when the system is connected to a cell phone)
- AM/FM** Selects AM/FM/WB Radio
- DVD/USB** Selects DVD/USB
- AUX/ ARC** Selects AUX/ ARC Mode
- AV** Selects AV Mode
- CLOCK** Displays and sets the time
- SETUP** Enters the Setup menu for the entertainment system
- RDM** Toggles random playback-mode on & off.
- A-B** Press to start the A-B repeat function (playback loop of a segment of track)
- ZOOM** Press to enlarge screen images.
- ST/ ANGLE** Toggles Stereo & Mono sound/ switches viewing angles on compatible media.
- EQ** Toggles the sound mode Cinema, Rock, Classic & Flat.
- SEL** Toggles between Volume, Bass, Treble & Balance; Hours & Minutes for adjusting.
- LOC/ SLOW** Toggles radio reception strength/ Press to start slow motion playback.
- SEARCH/ GOTO** Jumps to a specific time on a DVD/VCD/MP3/WMA or CD.
- SUBT** Press to display subtitles on compatible media. Repeatedly press to cycle through subtitle options.

Set Up

Using the Menu

Press to select TV Mode and then to turn on the TV. Press to enter the menu.

Use the keys to navigate the menus and to select settings.

Press to confirm selections & setting and enter sub menus Press at any time to exit the menu.

Setup Wizard

The first time the TV is turned on, the SETUP WIZARD will start. The wizard will assist in configuring the TV for use. and scan for available channels.

1 Use or keys to highlight **TV Location**, then press or to select **Home Mode** or **Retail Mode**.

Press or to highlight **Go to next step**, press or to go to the next step.



2 Use or keys to highlight **Menu Language**, then press or to select the desired language.


Press or to highlight **Go to next step**, press or to go to the next step.



3 Use or keys to highlight **Time Zone** then press or to select the desired timezone.

Use or keys to highlight **Daylight Saving Time** then press or to select **On** or **Off**.

Use or keys to highlight **Time Format** then press or to select **12-hour** or **24-hour**.

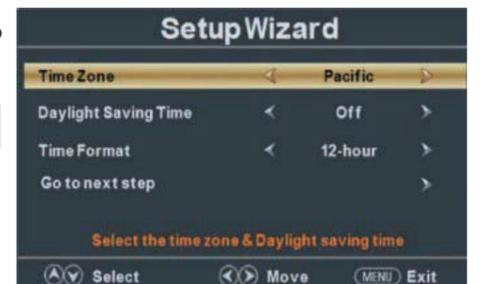

Press or to highlight **Go to next step**, press or to go to the next step.