

# USER MANUAL

Please read this manual carefully before using this TV set and keep it for future reference.

# LCD TV

**L1949**

---

***Thank you for choosing Legend.  
Need help fast?***

Read your Quick Start Guide and User Manual first for quick tips and instructions on using your Legend product.

***IMPORTANT !!!***

If you have read the instruction manuals and still need assistance, please call us at the toll free number below.

**1-866-96-LEGEND**

**24 Hours a Day/ 7 Day a Week**

# WARNING AND CAUTION

	<b>CAUTION</b> RISK ELECTRIC SHOCK DO NOT OPEN	
<p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

# IMPORTANT SAFETY INSTRUCTIONS

## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 15) The mains plug or appliance inlet is used as the disconnect device, remain it readily operable during the apparatus normal use.

# CONTENT

Safety Notice Items.....	1
Front Panel Controls.....	2
Connection Options.....	3
Remote Control .....	4
Remote Control Key Functions.....	5
Connection Instructions.....	6
External equipment Connections.....	6
Antenna Connection.....	6
VGA Setup.....	7
Component Setup.....	7
VCR Setup.....	8
HDMI Input.....	8
Cable TV Setup.....	9
External Component Source Setup.....	9
Basic Operating Instructions.....	10
Switch On/Off the TV set.....	10
Choose the input source.....	10
Audio Control.....	10
Mute.....	10
INFO.....	10
Select the TV Channel You Want.....	11
Picture Mode.....	11
Audio Mode.....	11
Sleep.....	11
GUIDE.....	11
ARC button.....	11
.Button.....	12
CH.LIST button.....	12
FAVORITE button.....	12
Menu Operations.....	13
Video Menu Options.....	13
Video Menu Options Continued.....	14
Audio Menu Options.....	15
Audio Menu Options Continued.....	16
Channel Menu Options.....	17
Channel Menu Options Continued.....	18
Function Menu Options.....	19
Function Menu Options Continued.....	20
Lock Menu Options .....	22
Lock Menu Options Continued.....	23
PC Menu Options.....	27
PC Menu Options Continued.....	28
Stream media broadcast system.....	29
Troubleshooting Guide.....	31
Specifications.....	32

# Safety Notice Items

Incorrect usage may cause fire or electric shock. To prevent this, please do as required when you are installing, using and cleaning this machine. To ensure your safety and extend the life-span of LCD-TV, please read the following items carefully before using:

Please read and understand all the instructions before operation;

Please keep this manual for later use;

Please comply strictly with the warning instructions on the machine and in this book;

Please comply with the instructions provided;

Please do not use additional devices that are not recommended by manufacturer:

Before operation, please make sure that the operating voltage of your unit is correct;

Do not place the unit on unstable, dusty and humid places;


Never put the unit in direct sunlight or near heat sources;

Allow enough space for proper ventilation;

Please keep water away from the LCD-TV. If water comes in contact with the LCD-TV, disconnect the power cord from the power source, then wipe the set with a dry soft cloth;

Do not remove the back cover. If service is needed, please contact an Authorized service technician.


# Front Panel Controls

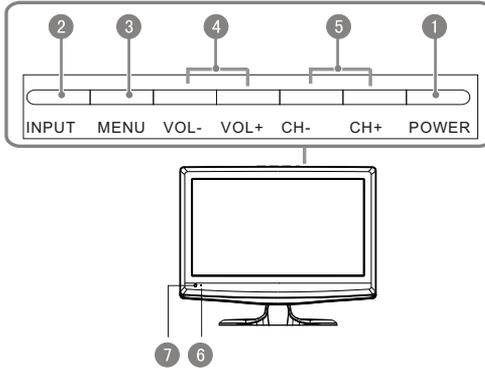

## Control Panel Function

1. **POWER** Press to turn on and off the TV.
2. **INPUT** Selects the input signals.
3. **MENU** Menu display. Press to access the on-screen menu display.
4. **VOL-** Volume down / Left button to adjust the item in the OSD.  
**VOL+** Volume up / Right button to adjust the item in the OSD / Press to enter.
5. **CH-** TV channel down / to select the item in the menu.  
**CH+** TV channel up / to select the item in the menu.
6. Power indicator
7. **Remote Sensor** Receives IR signals from the remote control. Do not put anything near the sensor, which may block the remote control signal.

# Connection Options

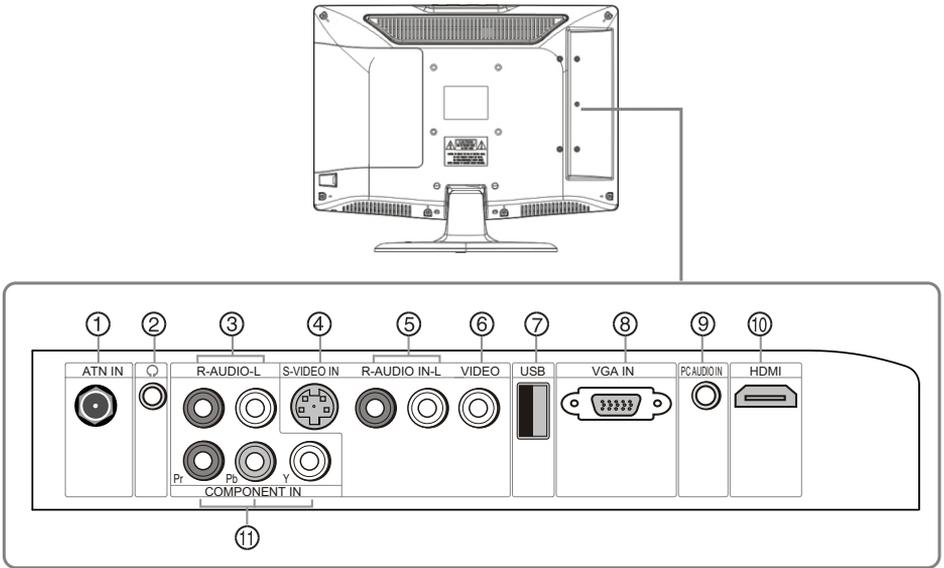


- 1. ANT IN (Antenna Input)** Connect cable or antenna signals to the TV, either directly or through your cable box.
- 2. Headphone jack :** Headphone audio output terminal.
- 3. Audio in** Connect audio output from an external device to these jacks.
- 4. S-VIDEO** Connect S-Video out from an S-Video device to the jacks.
- 5. Audio in** Connect audio output from an external device to these jacks.
- 6. Video in** Connect video output from an external device to this jack.
- 7. USB input** Connect a USB flash drive to view JPEG images or listen to MP3 songs.
- 8. VGA** Connect to the VGA 15PIN analog output connector of a PC graphics card to use set as a PC display.
- 9. PC audio in** Connect the audio output from the pc to the PC audio input port.
- 10. HDMI:** Connect a HDMI device to receive digital audio and uncompressed digital video.
- 11. Component Input** Connect a component video device to these jacks.

# Remote Control

## Installing Batteries


Remove the battery cover.

Insert two size AAA batteries matching the +/- polarities of the battery to the +/- marks inside the battery compartment.

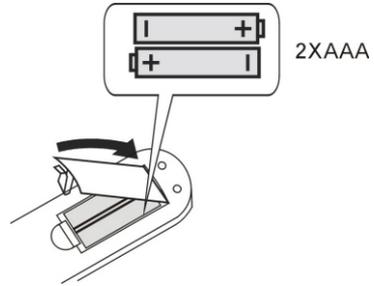

## Precautions


Make sure that there is no obstacle between the remote controller and television set.

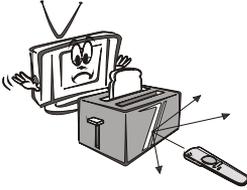


As strong light may interfere with the signals, change your position to operate the remote control if the television cannot be turned on or off as expected.



Keep the remote control away from heat sources or humid areas to ensure effective performance of the remote.

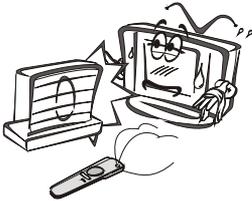


 Make sure that two AA 1.5V or AAA depending up the model alkaline batteries are loaded. The batteries must be of the same type, must be inserted properly, and must not be rechargeable.



# Remote Control Key Functions

When using the remote control, aim it towards the remote sensor on the TV

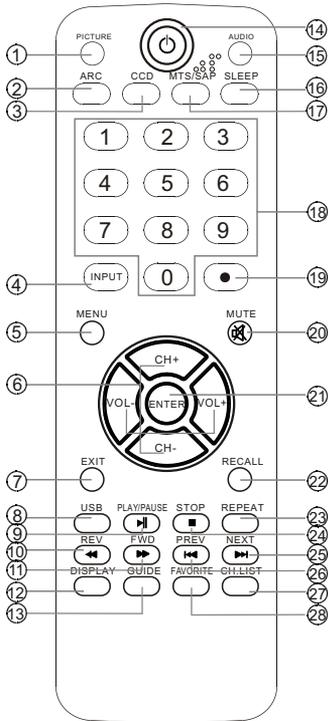

(For TV without DVD)

1. Press repeatedly to cycle through the available picture modes
2. Press to change the aspect ratio
3. Select a closed caption option
4. Show the input source
5. Press to open the on-screen menu
6. Volume/Channel Selection
7. Exit On Screen Display
8. Press to switch input source to USB in
9. USB PLAY/PAUSE
10. USB fast reverse
11. USB fast forward
12. Press to display the TV status information on the top of the TV screen
13. Shows program schedule in TV
14. Press to turn on and off the TV
15. Press to cycle through different sound settings
16. Press to display the sleep timer option
17. Select MONO, STEREO, SAP in NTSC system
18. Press to change a channel
19. Press to select digital channels. For example, to enter "54-3", press "54", " ." and "3".
20. Switches the TV sound on or off
21. Accesses the highlighted item in the on-screen menu
22. Press to jump back and forth between two channels
23. USB REPEAT
24. USB STOP
25. USB Next Chapter
26. USB Previous Chapter
27. Open the channel list in TV
28. Open the favorite channel list in TV

Color buttons





When functions are attached to the color buttons, the color buttons are shown on screen.

# Connection Instructions

## External Equipment Connections

### Antenna Connection

Over-the-air TV reception will depend on your antenna type, antenna location and antenna positioning.

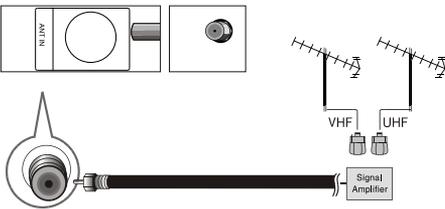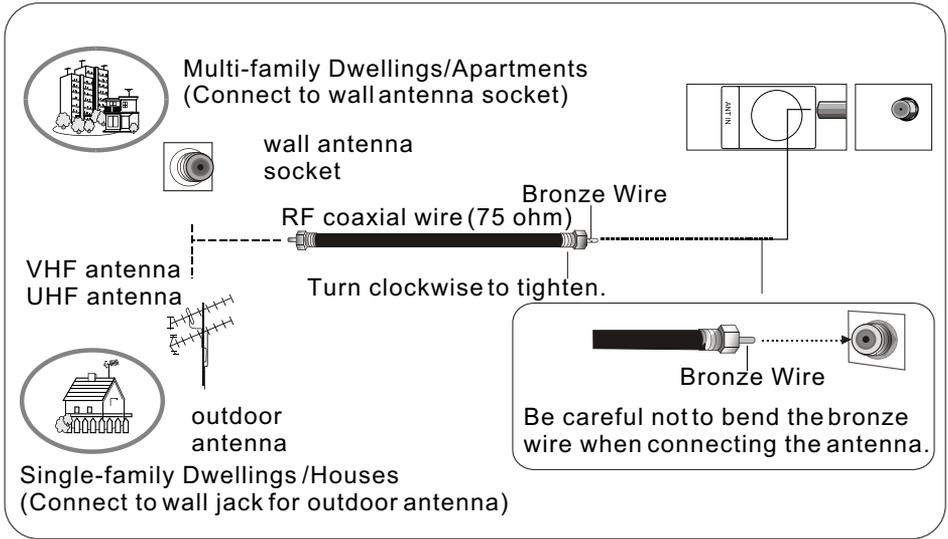

- To improve picture quality in a poor signal area, purchase and install a signal amplifier.
- If the antenna needs to be split for two TVs, install a "2-Way Signal Splitter" in the connections.
- If the antenna is not installed properly, contact your dealer for assistance.

**NOTE: Cables shown are not included with the TV**


# Connection Instructions

## VGA Setup

You can use your LCD-TV as a monitor for your personal computer using a VGA cable (not supplied).

### Connection and use steps:

1. Read the userguide supplied with your computer and ensure that it has a VGA connector;
2. Make sure that the power of the LCD -TV and the PC are off;
3. Connect a Dtype 15-pin PC interface cable ( not supplied ) to the PC video interface connector on the PC. Then connect the other end to the PC video interface connector on the back of the LCD-TV. Tighten the screws on the PC connectors once they are firmly connected;
4. Turn on the power of the LCD-TV first , and then turn on the power of the PC;
5. Press INPUT button to set the video input mode of the LCD-TV to PC; Once the input for PC is selected and if you see no image press function F8 on you pc.
6. Check the image on your TV. There may be noise associated with the resolution, vertical pattern, contrast or brightness in PC mode. If noise is present, change the PC mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.

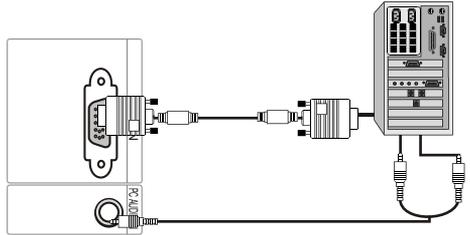

### Resolution

Mode	Resolution	Line frequency(KHz)	Frame frequency(Hz)
VGA	640x480	31.5	60
SVGA	800x600	37.9	60
XGA	1024x768	48.4	60

Note: All above listed are subject to VESA criteria.

## Component Setup


### How to connect

Connect the DVD video outputs (Y, PB, PR) to the Component(Y, Pb, Pr) IN jacks on the TV and connect the DVD audio outputs to the AUDIO IN jacks on the TV, as shown in the figure.

**NOTE:** If your DVD player does not have component video output, use S-Video.

### How to use

1. Turn on the DVD player, insert a DVD.
2. Use INPUT button on the remote control to select the proper input.

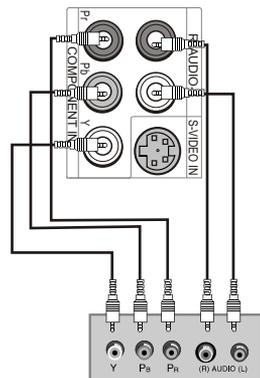

# Connection Instructions

## VCR Setup

- To avoid picture noise (interference), leave an adequate distance between the VCR and TV

### Connection and use steps:


1. Read the user guide supplied with your AV devices and ensure that it has Composite or S-Video connectors;
2. Make sure that the power of the LCD-TV and the AV device are off;

### Connection Option 1

Set VCR output switch to 3 or 4 and then tune TV to the same channel number.

### Connection Option 2

1. Connect the audio and video cables from the VCR's output jacks to the TV input jacks, as shown in the figure.  
When connecting the TV to VCR, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).  
If you connect an S-VIDEO output from VCR to the S-VIDEO input, the picture quality is improved; compared to connecting a regular VCR to the Video input.
2. Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
3. Turn on the LCD-TV first; and then turn on the power of the AV device;
4. Press **INPUT** button to set the video input mode of the LCD-TV to S-Video mode or Video mode.

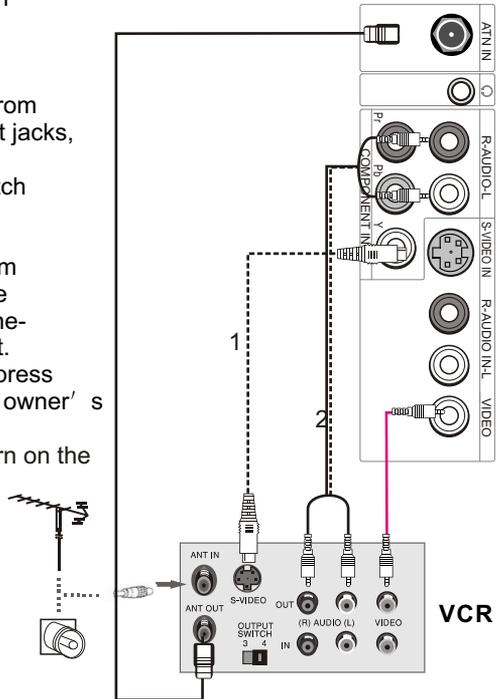


## HDMI Input

### How to connect

Connect the cables from the external equipment's output jacks to the TV input jacks, as shown in the figure.

### How to use

1. Select the input source by using **INPUT** button on the remote control or on the TV.
2. Operate the corresponding external equipment. Refer to external equipment operating guide.

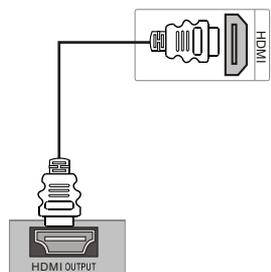

# Connection Instructions

## Cable TV Setup


- After subscribing to a cable TV service from a local provider you can watch cable TV programming. The TV cannot display TV programming unless a TV tuner device or cable TV converter box is connected to the TV.
- For further information regarding cable TV service, contact your local cable TV service provider(s).

### Connection Option 1

1. Select 3 or 4 with channel switch on cable box.
2. Tune the TV channel to the same selected output channel on cable box.
3. Select channels at the cable box or with the cable box remote control.

### Connection Option 2

1. Connect the audio and video cables from the Cable Box's output jacks to the TV input jacks, as shown in the figure. When connecting the TV to a Cable Box, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).
2. Select the input source by using the **INPUT** button on the remote control.
3. Select your desired channel with the remote control for cable box.

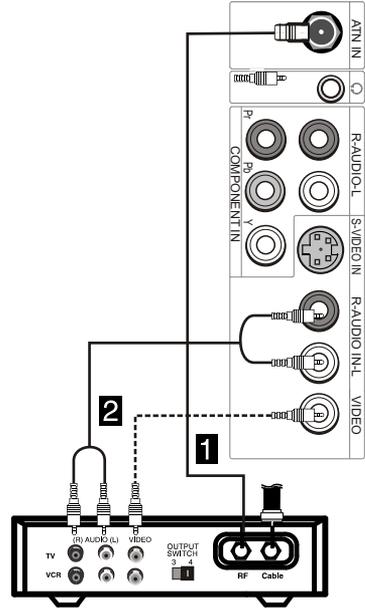

Cable Box


## External Component Source Setup

### How to connect

Connect the audio and video cables from the external equipment's output jacks to the TV input jacks, as shown in the figure. When connecting the TV to external equipment, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).

### How to use

1. Select the input source by using the **INPUT** button on the remote control.
2. Operate the corresponding external equipment. Refer to external equipment operating guide.

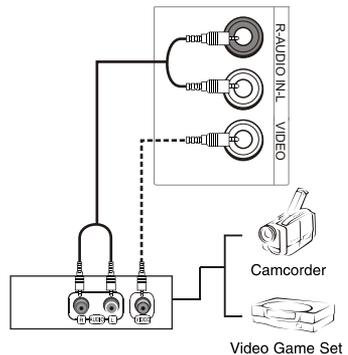

# Basic Operating Instructions

## Switch On/Off the TV set

When the **POWER** (⏻) button is pressed and the LCD-TV is turned on, the indicator light on the front of the LCD-TV changes from red to green. When the LCD-TV is turned off using the power button, the LCD-TV will go into standby mode and the indicator light turns red (or turns dark).

NOTE: The color of the indicator light may differ based upon the model purchased.

## Choose the input source

Change the picture source so you can watch your TV, VCR, DVD, Cable, or any other devices that are connected to your TV.

1. Press **INPUT** button to enter the Select Source menu and then use **INPUT** button to select the desired items ( TV, Video, S-Video, Component DVD, PC, HDMI) .
2. Press **ENTER** button to confirm .

## Audio Control

1. Press **VOL+** button to increase the volume. A number will appear on screen indicating the volume level.
2. Press **VOL-** button to decrease the volume. A number will appear on screen indicating the volume level.

## Mute

1. Press **MUTE** button to mute the sound temporarily. A mute icon Appears on the screen.
2. Press **MUTE** button or **VOL+** again to restore the sound. The mute icon disappears.

## INFO

Press **INFO** button to display current program information.

# Basic Operating Instructions

## Select the TV Channel You Want

You can use the number buttons and ● button on the remote control to directly select TV channels and press **ENTER** to confirm.

And you can press the buttons(**CH+/CH-**) on the remote control or on the panel to make a selection.

## Picture Mode

Press **PICTURE** button on the remote control for menu display . For desired mode as follows:

**Mild**→ **Standard**→**Vivid**→**Custom**

## Audio Mode

Press **AUDIO** button on the remote control for menu display . For desired mode as follows:

**Off**→ **Rock**→**Pop**→ **Live** → **Dance**→ **Techno**→ **Classic**→ **Soft**

## Sleep

Press **SLEEP** button to set the time : **Off-5 Min-10 Min-15 Min-30 Min- 45 Min -60 Min-90 Min-120 Min-180 Min-240Min**

This function allows you to turn off the television after a pre-selected number of minutes

## GUIDE(only available in digital signal)

Press **GUIDE** button in digital channels to display Guide menu.(This menu is just for you to see the information and can not be changed)

Press **CH+/CH-** to select information for you to look over.

## ARC button

Press to select the aspect ratio among Normal, Wide, Zoom and Cinema.  
(Display mode may differ from different inputs)

# Basic Operating Instructions

## ● button

Press to select additional channels (digital and analog) being broadcast by the same station. For example, to select digital channel "11.1", press "11", then press "●" and "1".

## CH.LIST button

Press to display the channel list. Press **VOL+/VOL-** to turn to the next or previous page, press **CH+/CH-** to select the item and **Enter** button to select the channel you desired.

## FAVORITE button

Adding favorite channels

Press **FAVORITE** under one channel. The favorite channel list opens.

Press **CH+** or **CH-** to select a blank box, then press **Enter** to confirm.

The channel will be added to the favorites channel list.

Press **Enter** again, the channel will be removed from the favorites channel list.

Tuning to a favorite channel

Press **FAVORITE**. The favorite channel list opens.

Press **CH+** or **CH-** to select the channel and press **Enter** to confirm.

Your LCD TV automatically tunes to the channel you selected.

# Menu Operations

\* In this manual, the OSD (On Screen Display) may be differ from your TV These are examples to illustrate the TV's operation.

Press Input to select the input source. The menu for each source may be different .


1. Press **MENU** button to display the main menu, and ▲ / ▼ to select the main menu function.
2. Press ►/ENTER button to enter the sub menu and ▲ / ▼ to go up and down to select the desired option .
3. Press ►/ENTER button to confirm and ◀/▶ to make changes to the parameters.
4. Press **EXIT** button to return to the main menu.
5. Press **MENU** button to exit the menu screen.

## Video Menu Options

Picture quality can be adjusted for any input separately .

The picture quality on the screen can be adjusted as follows:

1. Press **MENU** button and ▲ / ▼ until the following menu appears on the screen.
2. Press ►/ENTER button to enter the menu function and ▲ / ▼ to scroll up and down to select the desired function.
3. Press ►/ENTER button to confirm and ◀/▶ increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired picture quality has been achieved .

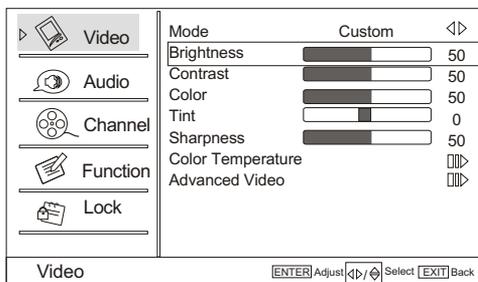

Note:

1. The options may be different because of the inputs.
2. Symbols on top of the menu in this manual may differ from the actual set display.
3. The picture options can be changed only in Custom mode, the other modes are fixed.

# Menu Operations

## Video Menu Options continued

### Function:

**Mode:** Select the type of picture which best corresponds to your viewing requirements by selecting Picture Mode in Video menu. You may select the picture mode directly by pressing the **PICTURE** button on the remote control.

**Brightness :** Press ▲ / ▼ button and ► / ENTER to confirm, then press ◀ / ▶ to adjust the brightness of the picture.

**Contrast :** Press ▲ / ▼ button and ► / ENTER to confirm, then press ◀ / ▶ to adjust the contrast of the picture.

**Color :** Press ▲ / ▼ button and ► / ENTER to confirm, then press ◀ / ▶ to adjust color saturation.

**Tint :** Adjust the tone of the picture .

**Sharpness :** Adjust the amount of the detail enhancement , the image sharpness rises as the number increases (By increasing the level, it will show cleaner and clearer images and by decreasing the level, it will make the picture smoother).

**Color Temperature:** This will increase or decrease **Warm** (red) and **Cool** (blue) colors to suit personal preferences. Select **Cool** to give the white colors a blue tint, **Standard** to give the white colors a neutral tint, **Warm** to give the white colors a red tint. **Custom** to allow you change the color manually.

Contrast, Brightness, Sharpness, Color Temperature and Tint can only be adjusted when Mode in Custom mode.

**Advanced Video:** To adjust the picture in advanced level:

**DNR:** Digital Noise Reduction. To adjust to reduce the appearance of digitizing error caused by the compression: Medium, Strong, Auto, Off and weak.

**Black Level Extender:** To adjust the ability in the black areas detail of the picture: On and Off.

**White Peak Limiter:** To adjust the ability in the white areas detail of the picture: On and Off.

**CTI:** Color Transient Intensity. To adjust the picture for color errors: Medium, Strong, Off and weak.

**Flesh Tone:** To adjust the flash colors: On and Off.


**Adaptive Luma Control:** To adjust changes in the luminance of the picture: On and Off

# Menu Operations

## Audio Menu Options

Sound can be adjusted for any input as follows:

1. Press **MENU** button and **▲/▼** until the following menu appears on the screen.

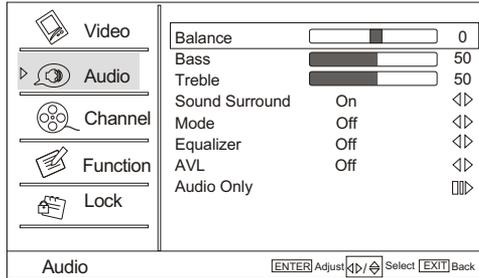

You can adjust sound options to the levels you prefer.

2. Press **▶/ENTER** button to enter the Audio menu and **▲/▼** to go up and down to select the desired option .
3. Press **▶/ENTER** button to confirm and **◀/▶** increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired audio quality has been achieved .

### Function :

**Balance** : Press **▲/▼** button and **▶/ENTER** to confirm, then press **◀/▶** to adjust the audio output between left and right speakers.

**Bass** : Press **▲/▼** button and **▶/ENTER** to confirm, then press **◀/▶** to increase or decrease the level of the lower-pitched sounds .

**Treble** : Press **▲/▼** button and **▶/ENTER** to confirm, then press **◀/▶** to increase or decrease the level of the higher-pitched sounds

**Sound surround**: To turn the simulated surround sound on and off.

**Mode** : Press **▶/ENTER** to select the type of sound which best corresponds to your lightning requirements by selecting Mode in Audio menu.

 
**Equalizer**: To adjust the equalizer: **Off, Rock, Pop, Live, Dance, Techno, Classic** and **Soft**.

# Menu Operations

## Audio Menu Options Continued

**AVL:** This will reduce the differences in volume level among broadcasters.

**Audio Only:** Press **▶/ENTER** button to confirm, the following display will appear on the screen:



Press **◀** to select **OK**, then press **OK** to confirm. The TV screen will be black and no picture, but the sound is still normal.

You can press **POWER** button to reveal the picture on the screen.

### SAP Broadcasts Setup:

This TV can receive MTS stereo programs and SAP (Secondary Audio Program) that accompanies the stereo program; if the station transmits an additional sound signal as well as the original one. When having selected SAP button on the remote control, this TV can only receive the signal when the TV station transmits the proper signals. Mono sound is automatically received if the broadcast is only in Mono; even though Stereo or SAP has been selected.

Select Mono if you want to listen to mono sound during stereo/SAP broadcasting.

Stereo or SAP can be received in a Analog channel.


1. Use the SAP button to select your desired MTS mode in a analog signal. Each time you press the SAP button, Mono, Stereo or SAP appear. If other languages are available on the digital signal, select them with the SAP button.
2. Press EXIT button to save and return to TV viewing.

# Menu Operations

## Channel Menu Options

Note: Channel menu will appear in main menu only in TV mode.

1. Press **MENU** button and **▲/▼** until the following menu appears on the screen.

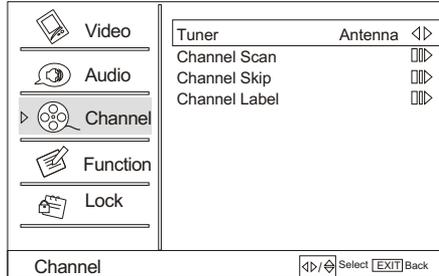

2. Press **►/ENTER** button to enter the Channel menu and **▲/▼** to go up and down to select the desired option .


3. Press **►/ENTER** button to confirm and **◀/▶** increase and decrease the level to adjust the selected option to your preference .

4. Repeat step 2 and step 3 until desired quality has been achieved .

### Function:

**Tuner:** Press **►/ENTER** button to select **Antenna** or **Cable** .

**Channel Scan:** Press **►/ENTER** button to start to scan, press **EXIT** to cancel

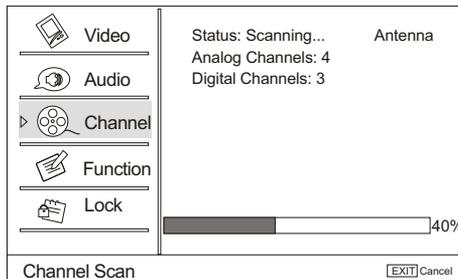


All channels now available will be automatically preset in order .After the search has finished, the first program number will display on the screen. This search automatically adds only the active channels in your area to the TV's memory. It deletes any channels on which there is no broadcast or a poor signal. The channels found are automatically saved.


# Menu Operations

## Channel Menu Options Continued

**Channel Skip:** Press **▶/ENTER** button to enter the submenu, then press **▲/▼** to select the channel number (eg.2) and press **ENTER** to confirm, a mark will be display in the paneas follows and this channel will be skipped nexttime you press **▲/▼** but you can press digits button to select the channel. If you want to resume the channel, press **ENTER** button again.

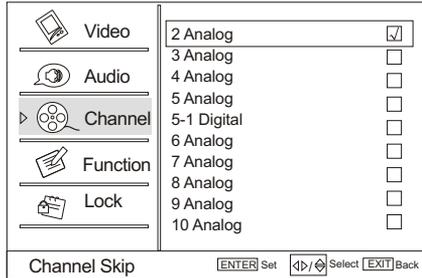

**Channel Label:** Allows you to name the channel that is selected. Press **▶/ENTER** button to enter the submenu.

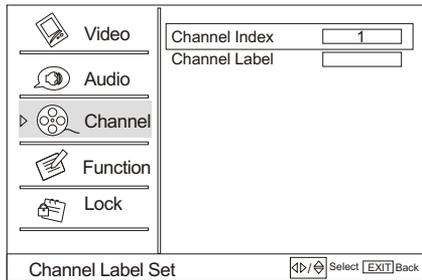

Then press **▲/▼** to select **Channel Index** and **Channel Label** and **◀/▶** to select the position of the item that you want to change, afterward press **INPUT** to input the numbers and symbols and **ENTER** button to confirm.

# Menu Operations

## Function Menu Options

1. Press **MENU** button and **▲ / ▼** until the following menu appears on the screen.

 Video	Language	English	◀▶
 Audio	OSD Timeout	Short	◀▶
 Channel	OSD Transparency	Middle	◀▶
 Function	Screen Mode	Normal	◀▶
 Lock	Blue Screen	On	◀▶
	DPMS	On	◀▶
	Time Setup		▶▶▶
	Closed Caption		▶▶▶
	Default		▶▶▶
Function	◀▶/↻ Select [EXIT] Back		

2. Press **▶/ENTER** button to enter the Function menu and **▲ / ▼** to go up and down to select the desired option .
3. Press **▶/ENTER** button to confirm and **◀ / ▶** increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired quality has been achieved .

### Function:

**Language:** Press **◀ / ▶** button to select language of the OSD.

**OSD Timeout:** Press **◀ / ▶** to select **Middle**, **Short** and **Long** to change the time of the OSD display.

**OSD Transparency:** Press **◀ / ▶** to select among **Low**, **High** and **Middle** to change the transparency of the OSD. To select Low, the OSD is opacity.

**Screen Mode:** Press **◀ / ▶** to select among **Normal**, **Wide**, **Zoom** and **Cinema** to change the display mode. (display mode may differ from different inputs)

**Blue Screen:** Press **◀ / ▶** to select On , the screen will be in blue after 3 seconds if there is no signal.


**DPMS:** PC Power Management. To set On, the set will be in standby mode automatically if no signal in 2 minutes; if signal input , the set will be on again automatically.

**Time Setup:** Press **▶/ENTER** to enter the submenu.

**Time Zone:** Press **◀ / ▶** to select the appropriate time zone.

# Menu Operations

## Function Menu Options Continued

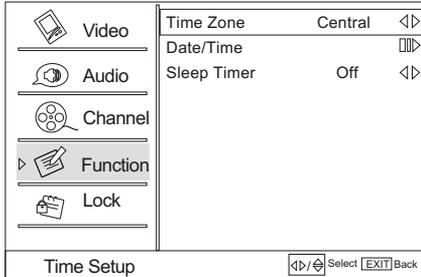

**Date/Time:** Press **▶/ENTER** to enter the submenu.



**Auto:** Press **◀/▶** to select On or Off . When Auto mode on , the time can not be adjusted. Select Off , you can operate to set the time manually.


**Date:** Press **◀/▶** to select the position and digits button to set the date.

**Time:** Press **◀/▶** to select the position and digits button to set the time.

**Timer:** Press **◀/▶** to select On or Off. To select Off, the time can not be adjusted.

**On Time/Off Time:** Press **◀/▶** to select the position and digits button to set the time. Press **ENTER** to switch on AM and PM.

**Closed Caption:** Press **▶/ENTER** to enter the submenu.

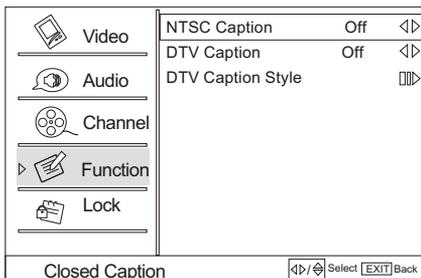

# Menu Operations

## Function Menu Options Continued

**NTSC Caption:** Press ▲/▼ to select the Closed Caption options. It helps the hearing impaired with the broadcast program, as well as helping children learn how to read. A built in decoder displays the audio portion of a program as text on the screen when this option is selected.

CC1: When CC1 is displayed on TV means CC mode is turned on.

CC2 to CC4: For other modes of video related broadcast information.

Text1: For program guide and other information displayed by broadcasters.  
(This blocks a large portion of the picture on your screen).

Text2 to Text4: For other modes of information displayed by broadcasters.  
(This blocks a large portion of the picture on your screen).

**IMPORTANT:** Closed captioning availability entirely depends on broadcasters supplying the signal. Therefore, closed captioning might not always be available and language availability will differ by broadcast.

**Note:** Select CC1 for full translation of the primary language such as English in your area. Select CC2 for secondary language translation such as French or any other language that may be broadcast in your area.

**DTV Caption:** Press ◀/▶ to select Service1/Service2/Service3/Service4/Service5/Service6/Off.

**DTV Caption Style:** Press ▶/ENTER to enter the submenu.

Video	Style	Custom	◀▶
	Size	Large	◀▶
Audio	Text Color	White	◀▶
	Text Opacity	Solid	◀▶
Channel	BG Color	Black	◀▶
	BG Opacity	Solid	◀▶
Function	Window Color	Black	◀▶
	Window Opacity	Solid	◀▶
Lock			
DTV Caption Style		◀▶/Select	EXIT/Back

ABC

**Style:** Press ◀/▶ to select one of Default and Custom. When you select default, the others are disabled and can not be adjusted. When you adjust the following system, a mark of “ABC” in a pane will be on the right of the OSD to display the effect.

**Size:** Press ◀/▶ to select the size of caption display according to your own preference.

**Text Color:** Press ◀/▶ to select the text color or the opacity of the text box of caption display according to your own preference.  
Select a color and one of the opacity options.

**Text Opacity:** Press ◀/▶ to specify the opacity for the text color.

**BG Color:** Press ◀/▶ to select a background color.

# Menu Operations

## Function Menu Options Continued

**BG Opacity:** Press ◀/▶ to select the opacity for the background color.

**Window Color:** Press ◀/▶ to select according your own preference

**Window Opacity:** Press ◀/▶ to select the edge color according your own preference.


**Default:** Press ▶/ENTER to enter the submenu.




Press ◀/▶ to select **OK** or **Cancel** then **OK** to confirm. If **OK**, the parameter will return to the factory set.

## Lock Menu Options

1. Press **MENU** button and ▲/▼ until the following menu appears on the screen.

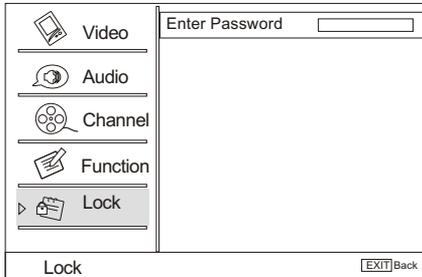


2. Press ▶/ENTER to enter and then press digits button to input the digits (The initial password is 0000. If you forget your password, you can always input 9443 to regain control). The menu will display as follows:

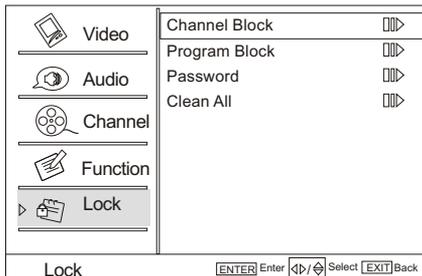

# Menu Operations


## Lock Menu Options Continued

**Channel Block:** Press **▶/ENTER** to enter the submenu as follows.

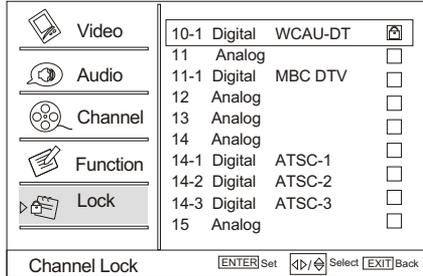

Press **▲/▼** to select the channel you want to lock, then press **ENTER** to confirm. The channel is locked and a lock mark appears in the pane. If you want to unlock the channel, repeat the operation above again. Then press **EXIT** to exit step by step.

**Program Block:** Press **▶/ENTER** to enter the submenu as follows.

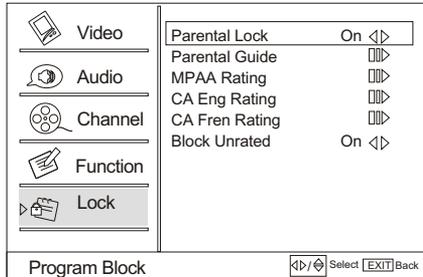

**Parental Lock:** Press **◀/▶** to select On or Off. Used to lock all the system following. To set Off, the system following can not be available.

**Parental Guide:** Press **▶/ENTER** to enter the submenu as follows. Press **▲/▼/◀/▶** to select the item you want to lock. Then press **ENTER** to confirm to lock and press again to resume it.

### Parental Guide Technology:

The "P.L. Technology" allows you to use U.S. and Canadian Movies and TV PROGRAMS Guide ratings to block certain types of TV programs and movies.

To clearly understand TV program rating codes, read the following information:

# Menu Operations

## Lock Menu Options Continued

 Video	A	D	L	S	V	FV
 Audio	TV-Y <input type="checkbox"/>					
 Channel	TV-Y7 <input type="checkbox"/>					<input type="checkbox"/>
 Function	TV-G <input type="checkbox"/>					
 Lock	TV-PG <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	TV-14 <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	TV-MA <input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	<input type="checkbox"/> Allowed Rating <input checked="" type="checkbox"/> Blocked Rating					
Parental Guide	[ENTER] Set [Left/Right] Select [EXIT] Back					

### U.S. TV Program Ratings

**TV-Y:** For all children - these types of rated programs are designed for a very young audience, including children from ages 2-6.

**TV-Y7:** Directed towards older children - this type of rated programs may include comedic violence of mild physical, or may frighten children under the age of 7.

**TV-G:** General audience - these types of rated programs contains little or no violence, no strong language, and little or no sexual dialogue and situations.

**TV-PG:** Parental Guidance Suggested - this type of rated programs may contain limited violence, some suggestive sexual dialogue and situations, and rare language.

**TV-14:** Parents strongly cautioned - these types of rated programs may contain sexual content, strong language and more intense violence.

**TV-MA:** Mature audience only - these types of rated programs may contain sexual violence, explicit sexual content and profane language.

**(A) All:** Blocks all available sub\_ratings.

**(D) Dialogue:** This type of rated programs contain dialogue with sexual content.

**(L) Language:** This type of rated programs contain offensive language.

**(S) Sex:** This type of rated programs contain sex.

**(V) Violence:** This type of rated programs contain violence.

**(FV) Fantasy Violence:** This type of rated programs contain Fantasy and cartoon violence.

# Menu Operations

## Lock Menu Options Continued

**MPAA Rating:** Press ►/ENTER to enter the submenu as follows. Press ▲/▼ to select the item you want to lock. Then press ENTER to confirm to lock and press again to resume it.

 Video	G	<input type="checkbox"/>
 Audio	PG	<input type="checkbox"/>
 Channel	PG-13	<input type="checkbox"/>
 Function	R	<input type="checkbox"/>
 Lock	NC-17	<input type="checkbox"/>
	X	<input type="checkbox"/>
	<input type="checkbox"/> Allowed Rating <input checked="" type="checkbox"/> Blocked Rating	
MPAA Rating		
[ENTER] Set [Left/Right] Select [EXIT] Back		

To understand clearly about movie rating codes, read the following list:

### U.S. Movie Rating Chart

**G:** General Audience-this type of movie rating means all ages admitted to see the movie.

**PG:** Parental guidance suggested. Some material may not be suitable for children.

**PG-13:** Parents Strongly Cautioned - this type of movie rating means some material may not be appropriate for children under 13.

**R:** Restricted- This type of movie rating means children under 17 of age require to be with parent or guardian.

**NC-17:** This type of movie rating means no one 17 and under admitted.

**X:** This type of movie rating means adults only.

**CA Eng Rating:** Press ►/ENTER to enter the submenu as follows.

Press ▲/▼ to select the item you want to lock. Then press ENTER to confirm to lock and press again to resume it.

# Menu Operations

## Lock Menu Options Continued

 Video	C	<input type="checkbox"/>
 Audio	C8+	<input type="checkbox"/>
 Channel	G	<input type="checkbox"/>
 Function	PG	<input type="checkbox"/>
 Lock	14+	<input type="checkbox"/>
	18+	<input type="checkbox"/>
		<input type="checkbox"/> Allowed Rating <input checked="" type="checkbox"/> Blocked Rating
CA Eng Rating <span style="float: right;">[ENTER] Set [Left/Right] Select [EXIT] Back</span>		

To clearly understand Canadian program rating codes, read the following list:

### Canadian English Rating Chart

- C:** This type of programming is intended for children under age 8. There is no offensive language, nudity or sexual content.
- C8+:** These types of rated programs are generally considered acceptable for children 8 years and over. There is no profanity, nudity or sexual content.
- G:** These types of rated programs are generally suitable for all audiences.
- PG:** Parental Guidance Suggested -in these types of rated programs, some material may not be suitable for children.
- 14+:** In these types of rated programs, some content may not be suitable for viewers under the age of 14. Parents are strongly cautioned not to have their children view 14+ rated programs by pre-teens and early teens.
- 18+:** Adults Only-these types of rated programs are only for adult viewers only.

**CA Fren Rating:** Press **▶/ENTER** to enter the submenu as follows.

Press **▲/▼** to select the item you want to lock. Then press **ENTER** to confirm to lock and press again to resume it.

 Video	G	<input type="checkbox"/>
 Audio	8 ans+	<input type="checkbox"/>
 Channel	13 ans+	<input type="checkbox"/>
 Function	16 ans+	<input type="checkbox"/>
 Lock	18 ans+	<input type="checkbox"/>
		<input type="checkbox"/> Allowed Rating <input checked="" type="checkbox"/> Blocked Rating
CA Fren Rating <span style="float: right;">[ENTER] Set [Left/Right] Select [EXIT] Back</span>		

# Menu Operations

## Lock Menu Options Continued

Canadian French Rating Chart

**G:** These types of rated programs are generally suitable for all audiences.

**8 ans+:** Children 8 years and above (French)

**13 ans+:** 13 years old and above (French)

 
**16 ans+:** 16 years old and above (French)

**18 ans+:** Adults Only - these types of rated programs are only for adult viewers only.

**Blocked Unrated:** Press ◀/▶ to select On or Off.  
Used to lock all the channel not rated.

**Password:** Press ▶/ENTER to enter the submenu, press digits button to input the number of 0-9 twice in the New Password and Confirm Password. Then you can change the password when you input the same number twice.

**Clean All:** Press ▶/ENTER to enter the submenu:



Press ◀/▶ to select OK or Cancel then OK to confirm. If OK, the parameter will return to the factory set.

Note: if there is any lock mark on the top of the set such as channel lock, parental lock and so on, you can press OK to resume it. ( Press OK to display password menu and input your password.)


## PC Menu Options

1. Press **MENU** button and ▲/▼ button to select Video menu in PC mode.
2. Press ▶/ENTER button to enter the Video menu and ▲/▼ to go up and down to select the desired option.


# Menu Operations

## PC Menu Options Continued

3. Press **▶/ENTER** button to confirm and **◀/▶** increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired quality has been achieved .

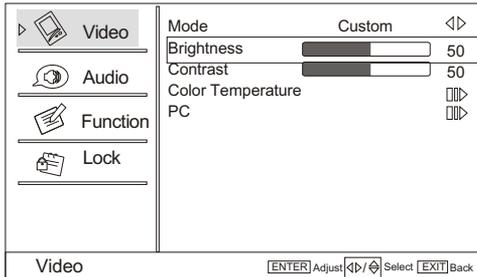

**PC:** Press **▲/▼** button to select and **▶/ENTER** to confirm, the PC menu as below:

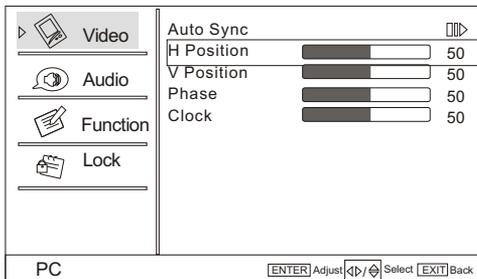

**Auto Sync:** Press **▲/▼** button and then press **▶** to auto adjust that automatically adjusts the available options for the best viewing configuration.

**H Position:** Press **▲/▼** button and then press **◀/▶** to adjust the horizontal position of the picture.

**V Position:** Press **▲/▼** button and then press **◀/▶** to adjust the vertical position of the picture.

**Phase:** Press **▲/▼** and then press **◀/▶** to adjust the phase of the picture.

**Clock:** Press **▲/▼** button and then press **◀/▶** to adjust the clock of the picture.

# USB Input

1. Supporting media and file format:  
Digital pictures (.JPG) and digital music (.MP3) files

Due to differences in the file code and file mode, It is possible that some files cannot be read.

2. Before starting operation, verify USB storage device is of FAT32 and FAT file system format. At present, this television does not support NTFS and the file systems of other format.


3. External card reader supports most digital cards available in the market. Readable digital cards are classified according to the property of card readers and can be connected to mobile hard disks (working voltage 5.0V, working current not over 500mA).

4. The television operation may be halted due to excessive rate of information code errors. In such case, restart the system. Please note - there are many nonstandard USB mobile devices in the market. If a nonstandard device is used then an identification problem may occur.

2. Press ◀/▶ button to select Picture folder. Press ENTER to enter.




3. Press ▲/▼/◀/▶ button to select desired picture, and then press ENTER button to enter the play interface.

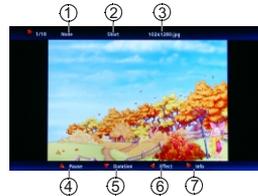

- 1. Play mode: None/Dissolve/Wipe right/Wipeleft/ Wipe up/Wipe down/Boxin/Box out
- 2. Play time: Short/Medium/Long;
- 3. File name
- 4. Pause/Play
- 5. Duration/Rotate
- 6. Effect
- 7. Information


4. Press the button on the remote control to select the adjusted item, press ENTER button to confirm.

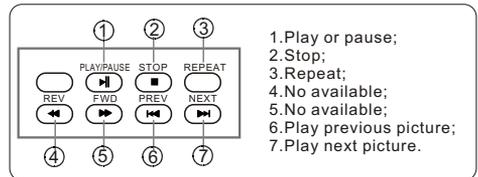

- 1. Play or pause;
- 2. Stop;
- 3. Repeat;
- 4. No available;
- 5. No available;
- 6. Play previous picture;
- 7. Play next picture.

## To play pictures

1. Press USB button on the remote to enter stream media system. The system start up takes about 3 seconds. Then insert the USB drive in the USB input.

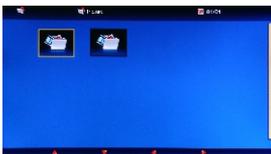

5. Press EXIT button to return to the previous menu. Press USB button to exit the USB mode.

Note: you may play the pictures among selected.

# USB Input

## To play music


1. Press ◀/▶ button to select Music folder. Press ENTER to enter.



2. Press ▲/▼/◀/▶ button to select desired music, and then press ENTER button to enter the play interface.



3. Press the button on the remote control to select the adjusted item, press ENTER button to confirm.

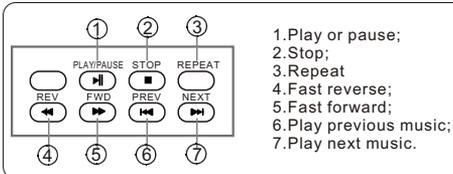

4. Press EXIT button to return to the previous menu.  
Press USB button to exit the USB mode.

Note: You may play the music among selected.

## To play pictures and music together

Insert USB drive with music and picture files in to the USB input, select the Music folder and choose the MP3 files to be played. Then select the pictures to be played. Please note as some files must be read while music is being played, the speed of picture operation response might be affected.

1. Press ◀/▶ button to select Music folder. Press ENTER to enter.




2. Press ▲/▼/◀/▶ button to select desired music, and then press ENTER button to enter the play interface.



3. Press EXIT button to turn to the main menu. And then press ◀/▶ button to select Picture option. Press ENTER to enter.



4. Press ▲/▼/◀/▶ button to select desired picture, and then press ENTER button to enter the play interface.

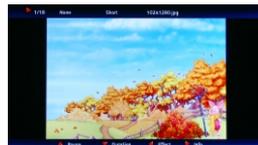

5. Press USB button to exit USB mode.

Note: Do not remove USB device from the TV until you have exited the USB mode otherwise you may damage the USB device.

# Troubleshooting Guide

- To assist in location possible faults use help guide below.

## Troubleshooting

No picture, no sound	Verify if the television is properly plugged in. Verify if the television is properly supplied with power. Verify that electricity is available.
Blank screen	Verify if correct signals are input. Press <b>INPUT</b> button to change signal input to TV input. Restart the television if power supply is interrupted.
No sound	Press <b>MUTE</b> button and verify if Mute mode is on. Switch to another channel and verify if the same problem happens. Press <b>VOL+</b> button to see if the problem can be solved.
Poor sound	Verify if sound system is functional. Refer to chapter on adjusting.
No picture in some channel	Verify if correct channel is selected. Adjust the antenna.
No color for some channel program (black and white)	Verify if the same problem exists in other channels. Check picture and sound systems. Refer to relative instructions in the Manual for color adjust.
Spots with some or all pictures	Verify if the antenna is correctly connected. Verify if the antenna is in good condition. Make fine adjustment of channel.
Abnormal functioning	Disconnect the television from power supply and, 10 seconds later, reconnect to the power supply. If the problem still exists, contact an authorized service depot for technical assistance.

### Note:

1. If the fault can not be repaired using the above guide consult with your local authorized service center.
2. The TV set must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV set has dangerous voltage levels inside that may be fatal or cause fire.

# Specifications

<b>Model</b>	<b>19"</b>
<b>Picture, sound system</b>	<b>NTSC, ATSC, Clear QAM</b>
<b>Audio output</b>	<b>≥3.0W+3.0W</b>
<b>External input port</b>	<b>AV input PC input S-VIDEO input PC audio input YPbPr input Antenna input HDMI input USB input</b>
<b>Power requirements</b>	<b>~120V 60Hz</b>
<b>Power consumption</b>	<b>50W</b>
<b>Temperature</b>	<b>Working: +5°C ~ +35°C Storage: -15°C ~ +45°C</b>
<b>Humidity</b>	<b>Working: 20% ~ 80% Storage: 5% ~ 90%</b>
<b>Accessories</b>	<b>Remote control Batteries User manual Warranty card</b>

## NOTE

Design and specifications are subject to change without notice.  
Dimensions quoted in this manual are approximate.

