


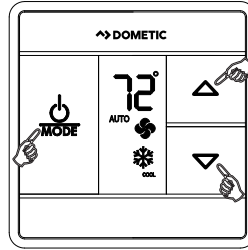


# CAPACITIVE TOUCH THERMOSTAT USER'S GUIDE


## Fan Mode Setting


Press the  / **Mode** button until the fan mode is active. Press the  or  button to cycle through the fan speed options Low, High, and Auto.



## Mode of Operation

A mode is an operation that can be performed by the CT Thermostat.


Press the  / **Mode** button to cycle through the available modes. All CT Thermostats have Cool and Furnace modes. Select models will have an additional mode, either Heat Pump or Heat Strip. The active mode will display on the LCD.

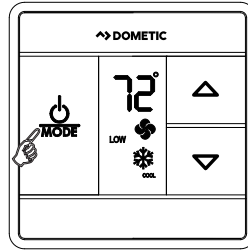

To change the set-point, press the  button to increase the set point and the  button to decrease the set-point.

## Inside Temperature

To display the Inside Temperature, the CT Thermostat must be in the OFF Mode. Press either the  or  button to display the Inside Temperature.

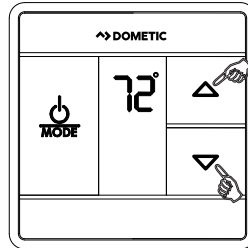

## Special Features

- Auto Fan
  - LCD Error Code
- See Operating Instructions for more Information on this special feature.

When the system determines that one of the faults listed below has occurred an error code will be displayed in the LCD.

- Error Codes:
- E1 Loss of communication between CT Thermostat and module board. LCD will cycle between E1 and previous mode setting. System will shut down.
  - E2 Open circuit or out of range Indoor Temperature Sensor. Heating and cooling operation will be locked out. Fan operation can continue to operate.
  - E3 Shorted Indoor Temperature Sensor. Heating and cooling operation will be locked out. Fan operation can continue to operate.
  - E4 Open circuit or out of range Outdoor Temperature Sensor (select models). Heat pump operation will be locked out. Air Conditioner, Fan, and Furnace mode of operation can continue to operate.
  - E5 Open circuit or out of range Freeze Sensor. Air conditioner mode of operation will be locked out, but displays the last temperature set-point.

In the unlikely event you experience a system failure, refer to the "SERVICE" section of the Operating Instructions furnished with your unit.




## CAPACITIVE TOUCH THERMOSTAT

### Capacitive Touch Thermostat Quick Start-Up

The basic steps for operating your Air Conditioner/Heat Pump/Heat Strip (hereinafter referred to as "unit") with the Capacitive Touch Thermostat (hereinafter referred to as "CT Thermostat") are described in this User's Guide. For more detailed information on modes of operation and special features, refer to the Operating Instructions Manual.

### Control Button Quick Reference

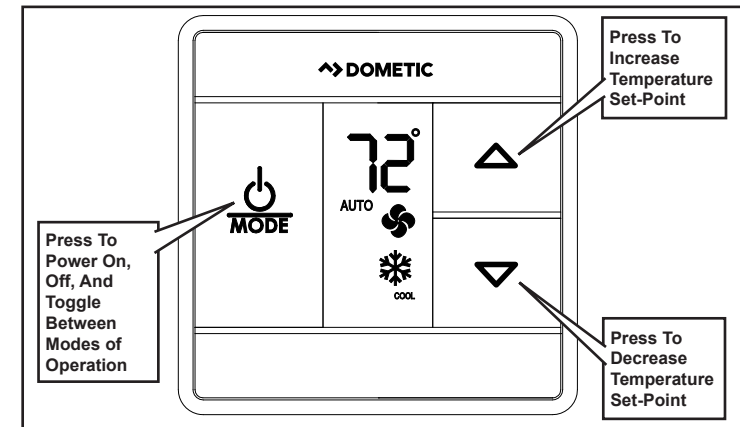

**Read these instructions carefully. These instructions MUST stay with this product.**

USER'S GUIDE

REVISION A  
Form No. 3316462.000 08/16  
(French 3316463.000\_A)  
©2016 Dometic Corporation  
LaGrange, IN 46761

USA  
SERVICE OFFICE  
Dometic Corporation  
1120 North Main Street  
Elkhart, IN 46514

CANADA  
Dometic Corporation  
46 Zatonski, Unit 3  
Brantford, ON N3T 5L8  
CANADA

Service Center &  
Dealer Locations  
Please Visit:  
[www.eDometic.com](http://www.eDometic.com)